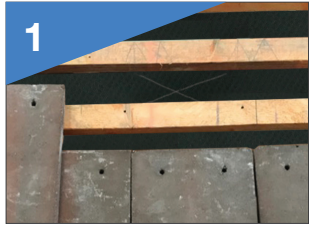

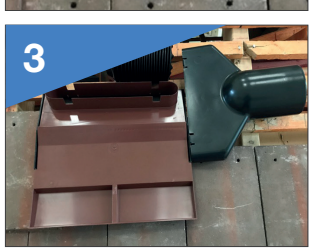

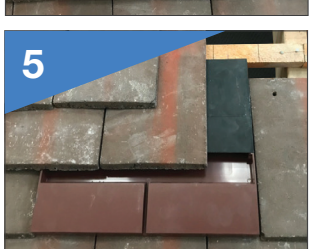
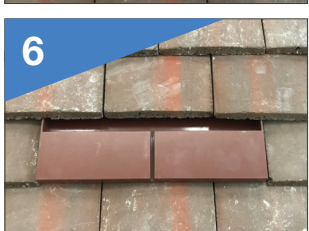








Ulti-Line Plain Tile Vents

Fixing Instructions

Ulti-Line Plain Tile Vent

 <p>1</p>	<p>Decide position where vent is to be installed, cut and mark membrane</p>
 <p>2</p>	<p>Fold Envelope section of the Membrane over the top batten and secure into position</p>
 <p>3</p>	<p>Select vent colour to suit and if being used for extraction also select adaptor ULTI3PTVA and flexipipe ULTI3FP. Do not fix adaptor at this time</p>
 <p>4</p>	<p>Position vent in the roof secure to the batten and if adaptor needed fit this from the underside</p>
 <p>5</p>	<p>Start to lay tile around the vent ensure that these are nailed in line with the Tile manufacturers recommended nail size</p>
 <p>6</p>	<p>Complete the roof and when finished you will have the Ulti-Mate Plain Tile Vent installation completed</p>

Ulti-Line Plain Tile Ulti-Match Vent

 <p>7</p>	<p>Identify where Ulti-Match Vent is to be fitted as also ideal for "retro fit" on old or obsolete tiles</p>
 <p>8</p>	<p>Expose the area where the vent is to be fitted and follow point 1 & 2 on cutting and fixing the membrane</p>
 <p>9</p>	<p>Position the Vent and cut two matching tile 75mm in length ready to adhere to the Ulti-Match Vent.</p>
 <p>10</p>	<p>Use a suitable Sealant (must adhere to ASA Plastic and finish of Tile), apply cut tile to Vent.</p>
 <p>11</p>	<p>Once Cut sections of Tile are adhered run a sealant strip on top edge and then allow sealant to fully adhere</p>
 <p>12</p>	<p>Complete the roof and if required fit the adaptor ULTI3PTVA and flexipipe ULTI3FP to the underside of the Vent</p>



All products are covered by our 15 year Durability Warranty terms and conditions can be found on our website.



All plastic products are made in UK.