


# Ulti-Line Tile Vents Fixing Instructions



Set out the roof and lay the tiles in line with the manufacturers fixing instructions until you reach the area where the vent tile is to be fitted

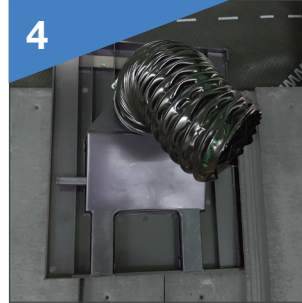

Select the Vent Tile to match to profile and colour and fit either without a flexipipe (if just being used for roof ventilation) or with a Ulti-Mate Flexipipe ULTI3FP for connection to Soil Pipe of Mechanical Extraction



Remove the tile where it is to be replaced with an Ulti-Line Tile Vent and Mark the cut line as shown



Continue to fit the remaining tiles again in line with the manufacturers fixing instructions



Cut the underlay as marked out and lift the cut sections with top section this is to be fixed to the batten above the opening.



With the Ulti-Line square Top Vent if a wider channel is needed to suit the concrete tile being used, cut out the two thinner wall sections on the front leading edge as highlighted in the adjacent drawing



All products are covered by our 15 year Durability Warranty terms and conditions can be found on our website.



All plastic products are made in UK.